

JEWEL
LASERS

MicroJewel DPSS Lasers

The MicroJewel Lasers Diode Pumped Solid State Nd:YAG:1064nm or 532nm

A rugged, cost-effective, ultra-compact micro laser measuring at just .5" x 3.5" and weighing just 40 grams. The MicroJewel is a 1064 diode pumped laser with Q-switched, high peak power pulses and excellent shot-shot stability. Even with its compact design, it still delivers up to 8mJ of energy and up to a 5Hz rep rate.

FEATURES:

- Dimensions: .5" diameter and 3.5" in length
- Weight: 40 grams
- Energy: Up to 8mJ
- Rep Rate: Up to 5Hz
- Compact, inline resonator
- Excellent shot to shot stability
- Efficient, reliable diode pump



Quantum Composers, Inc.
P.O. Box 4248
Bozeman, MT 59772

Phone (406) 582-0227
Fax (406) 582-0237
Toll Free (800) 510-6530

www.quantumcomposers.com
sales@quantumcomposers.com



光技術をサポートする
株式会社オプトサイエンス

<http://www.optoscience.com>

東京本社 〒160-0014 東京都新宿区内藤町1番地 内藤町ビルディング TEL:03-3356-1064
大阪営業所 〒532-0011 大阪市淀川区西中島7-7-2 新大阪ビル西館 TEL:06-6305-2064
名古屋営業所 〒450-0002 名古屋市中村区名駅2-37-21 東海ソフトビル TEL:052-569-6064

E-mail : info@optoscience.com


MicroJewel Specifications and Information

ADDITIONAL DATA

Resonator Size [inches (mm)] ¹	0.5 dia x 3.63 (12.7 dia x 92)
Diode Driver & Controller	3.0 x 2.0 x 3.4 (76 x 51 x 86)
Nonlinear Module	0.625" dia x .760"
Warm-Up-Power On To Ready	15 min
Operating Temperature [°C]	15 to 30
Storage Temperature [°C]	-10 to 50
Power Requirements	36-50VDC(48V Nominal) @ 0.5A (20W Max)
Repetition Rate	5Hz (contact manufacturer for higher rep rates)
Transvers Mode	multi-mode
Pointing Stability [μrad] ⁸	≤ 200
Energy Drift [%]	≤ 10 over 5 minutes
Polarization	150:1 for linear outputs

LASER SPECIFICATIONS

OUTPUT ENERGY[mJ] ²	
1064nm	8mJ
1064/532nm	≥3 @1064, ≥4@532
Near Field Beam Diameter (mm) ³	
1064nm	1.25 ± 0.5
532nm	1.25 ± 0.5
Beam Divergence [mrad] ⁴	
1064nm	≤3.0
532nm	≤2.5
RMS Stability [%] ⁵	
1064nm	≤2.5
532nm	≤3.5
Energy Variance [%] ⁶	
1064nm	≤5.0
532nm	≤7.0
Pulsewidth [ns] ⁷	
1064nm	6.0 ± 2.0
532nm	6.0 ± 2.0

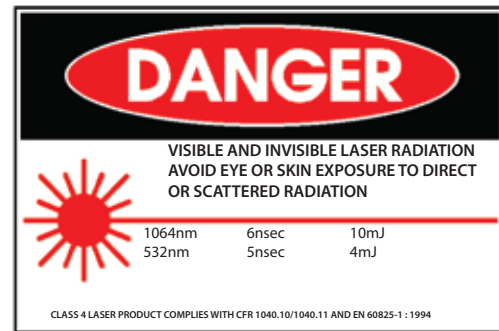

FURTHER INFORMATION

¹ 1064 nm only

² Nominal factory configuration. For OEM applications energies can be optimized to favor a specific wavelength, which in some cases can double the specified energy. Energy output @ 5Hz.

³ Beam widths are measured at the output window of the laser. Beam widths are measured using the second moment energy distribution.

⁴ Beam divergence is full angle. Beam divergence is determined by measuring the widths of the transformed beam by an aberration-free focusing element, one focal length away from the rear principle plane of the element.

⁵ RMS stability is defined as: (standard deviation)/(mean). RMS Stability is measured using the full laser beam for 1000 shots after a 100 shot turn-on at 5Hz operation.

⁶ Energy Variance is defined as: (max-min)/(max+min). Energy Stability is measured using 98% of the pulses of the full laser beam for any 100 shot interval, after the initial 100 shot stabilization from turn-on, up to 1000 shots of 5Hz operation.

⁷ Pulsewidth is measured at 5Hz PRF. The energy shall be within ± 10% of the specified energy when pulse width is measured. Pulsewidth is calculated from the full-width half-maximum (FWHM) of the waveform.

⁸ Pointing stability is measured on the 1064 nm laser output. It is measured as the angular shift between the centroid of the beam for the 1st pulse and the centroid of the beam exhibiting the strongest angular shift within the first 1000 consecutive shots at 5Hz operation. Measurement is far field, measured with an aberration-free focusing element, one focal length away from the rear principle plane of the element.



Toll Free Phone (800) 510-6530
Fax Phone Line (406) 582-0237

Email sales@quantumcomposers.com
Web www.quantumcomposers.com

V1.6 10/3/17